


IF ELECTROMAGNETIC INTERFERENCE: Channel Change 1.2.3.4.

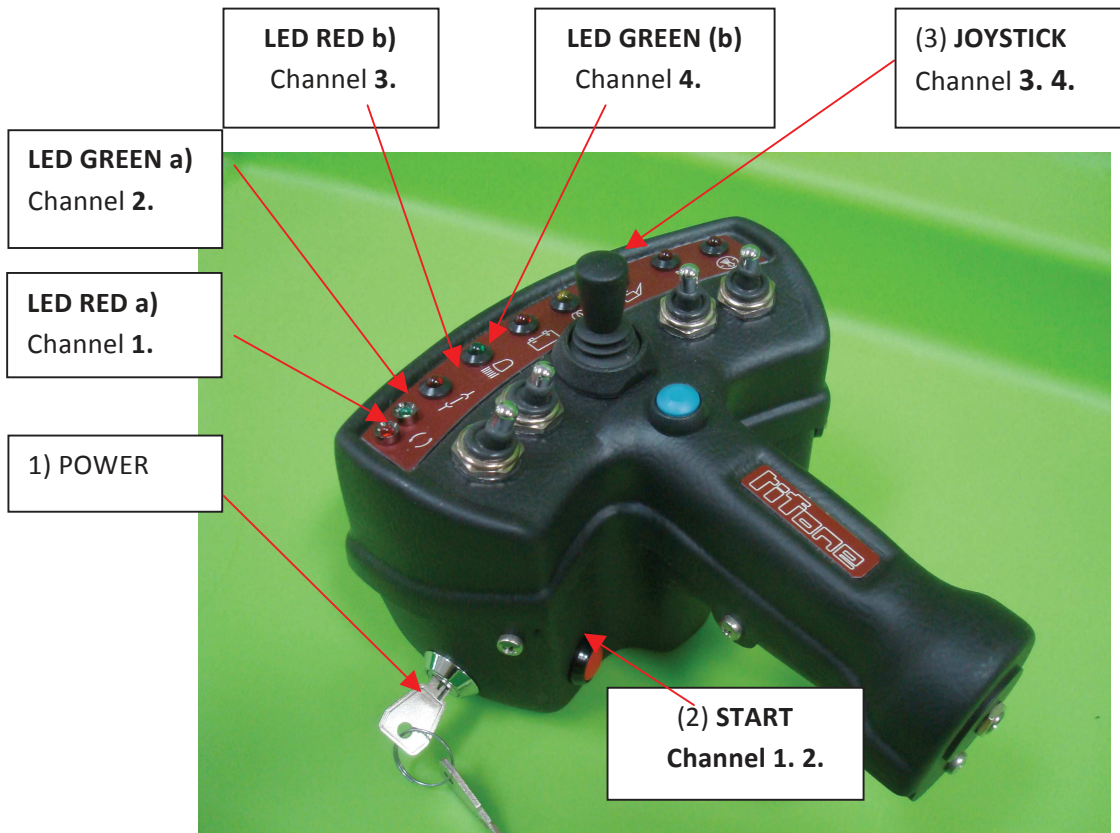

• TO ACTIVATE CHANNEL 1.

1. Turn off (1) **POWER**
2. Press and hold the red button (2) **START**
3. Activate (1) **POWER**
4. After 4 sec. the **RED LED a)** lights : Channel 1. Is activated. Release the red button (2) **START**

• TO ACTIVATE CHANNEL 2. *If Channel 1. Is disturbed.*

1. Turn off (1) **POWER**
2. Press and hold the red button (2) **START**
3. Activate (1) **POWER**
4. After 4 sec. the **GREEN LED a)** lights: Channel 2. is activated. Release the red button (2) **START**

• TO ACTIVATE CHANNEL 3. *If also Channel 2. Is disturbed.*

1. Turn off (1) **POWER**
2. Press and hold the (3) **JOYSTICK UPWARDS**
3. Activate (1) **POWER**
4. After 4 sec. the **RED LED b)** lights: Channel 3 is activated. Release the button (3) **JOYSTICK**

• TO ACTIVATE CHANNEL 4. *If also Channel 3. Is disturbed.*

1. Turn off (1) **POWER**
2. Press and hold the (3) **JOYSTICK DOWNWARDS**
5. Activate (1) **POWER**
3. After 4 sec. the **GREEN LED b)** lights: Channel 4. is activated. Release the button (3) **JOYSTICK**

AFTER CHANGED THE CHANNEL, ACTIVATE (1) POWER: The machine will recognize the last channel set.